

# Radius Authentication Service

This lab was developed for the Labtainer framework by the Naval Postgraduate School, Center for Cybersecurity and Cyber Operations under National Science Foundation Award No. 1438893. This work is in the public domain, and cannot be copyrighted.

## 1 Overview

This lab requires that you configure a Radius server to handle authentication services for a network device that is already configured to use Radius-based authentication. The Radius server is pre-configured to support an existing network device. You are simply required to add the second device. You are encouraged to use Wireshark within the lab to observe the Radius protocol exchanges.

### 1.1 Background

The student is expected to have separately learned about the basic elements of authentication and the Radius protocol.

The student is expected to have at least a basic understanding of the Linux command line, the basics of the file system, and the ability to edit a file. The student should have knowledge of the use of Wireshark, e.g., see the “wireshark-intro” lab.

## 2 Lab Environment

This lab runs in the Labtainer framework, available at <http://my.nps.edu/web/c3o/labtainers>. That site includes links to a pre-built virtual machine that has Labtainers installed, however Labtainers can be run on any Linux host that supports Docker containers.

From your labtainer-student directory start the lab using:

```
labtainer radius
```

A link to this lab manual will be displayed.

## 3 Network Configuration

This lab includes two simulated power distribution control devices that are configured to authenticate users via the Radius protocol. There are also two client computers from which users are expected to administer the control devices, which requires that the users be authenticated. And the network includes a Radius server. NOTE: the control devices do not have virtual terminals connected to them, so they only way to access them is through the client computers. The network is illustrated in Figure 1. When the lab starts, you will get three terminals, one connected to each of the client computers and one connected to the Radius server.

The host names of each component are per the diagram. The /etc/hosts files allow use of these host names instead of explicit ip addresses.

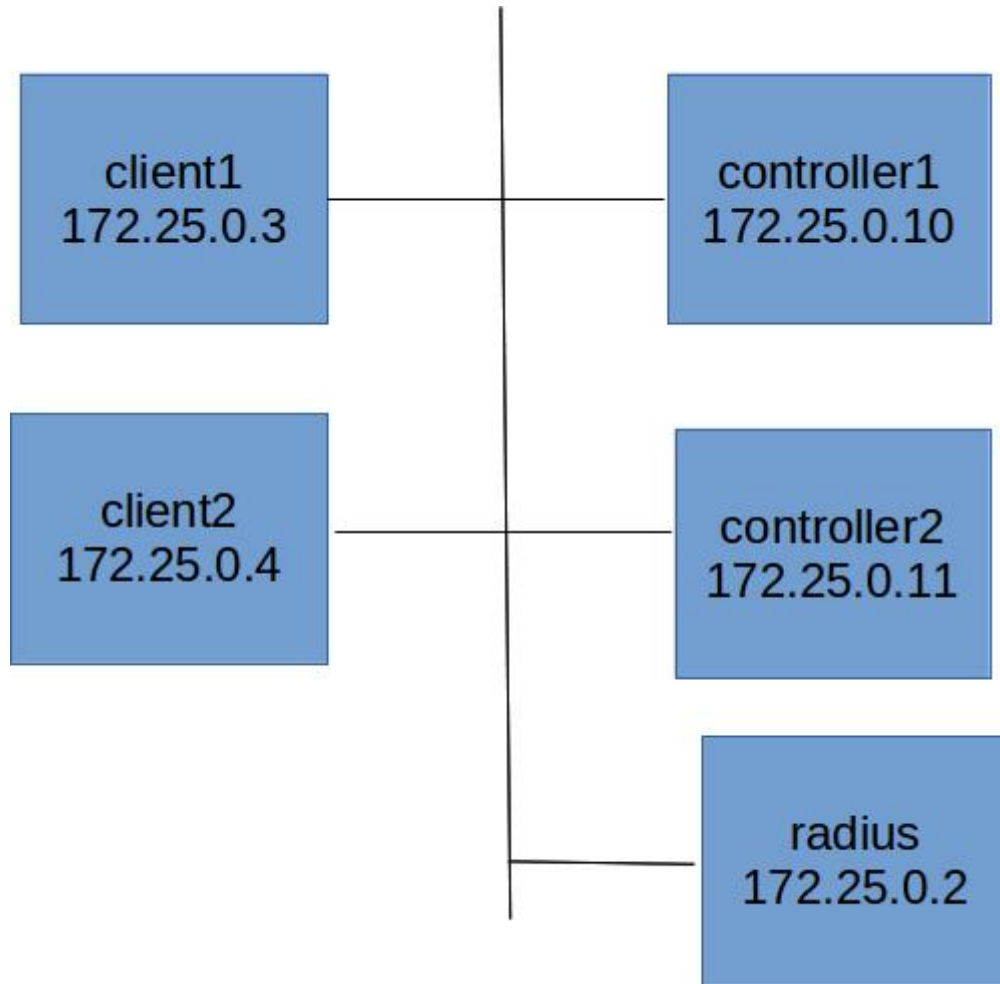


Figure 1: Network topology for the Radius lab

## 4 Lab Tasks

### 4.1 Explore

Start wireshark on the radius server:

```
wireshark &
```

and select the eth0 interface and start capturing data.

Then start the radius service in debug mode:

```
radiusd -X
```

On client1, connect to controller1:

```
./control_admin controller1
```

When prompted, provide `hardcoded_password` as the password.<sup>1</sup> Observe the traffic in Wireshark.

Then use `exit` to exit from `controller1`. And now try to access `controller2`, again using a password of: `hardcoded_password`

```
./control_admin controller2
```

What do you observe at the radius service? And in Wireshark?

## 4.2 Configure radius for controller2

The `controller2` device has been pre-configured to use your Radius server for authentication of users. That means it has the shared secret used by Radius to encrypt user passwords, and it knows the IP address of the radius server. However, the Radius server is not configured to serve `controller2`. You must change the Radius server configuration to recognize `controller2`. Use `Ctrl-c` at the radius server to stop the service. Edit the `/etc/raddb/clients.conf` file to allow `controller2` to authenticate via the radius service, and then restart the radius service.

Try again to access `controller2` from one of the clients.

## 4.3 Change the cadmin password

Stop the radius service and edit the `/etc/raddb/users` file to change the password of the `cadmin` user to something other than `hardcoded_password`. Then test your ability use the `config_admin` utility to access the controllers with the new password.

# 5 Submission

After finishing the lab, go to the terminal on your Linux system that was used to start the lab and type:

```
stoplab
```

When you stop the lab, the system will display a path to the zipped lab results on your Linux system. Provide that file to your instructor, e.g., via the Sakai site.

---

<sup>1</sup>If the `control_admin` program repeatedly informs you that the password is not correct, that may be due to the radius service not running.